# SPhone Client on Android Devices User Manual

Release 1.0



# **About This Document**

This manual introduces the Sphone and describes how to install it. It also provides an overview of functionality.

# **Version History**

Version	Description	Date
1.0	Initial release	Oct 2016

#### All Rights Reserved © Surveon Technology 201

## **Copyright Statement**

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Surveon Technology Inc.

# Disclaimer

Surveon Technology makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Furthermore, Surveon Technology reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revisions or changes. Product specifications are also subject to change without notice.

### **Trademarks**

Surveon and Surveon logo are trademarks of Surveon Technology Inc. Other names prefixed with "NVR" and "SMR" are trademarks of Surveon Technology Inc.

- Microsoft Windows and Windows are registered trademarks of Microsoft Corporation.
- Linux is a trademark of Linux Torvalds.
- Solaris and Java are trademarks of Sun Microsystems, Inc.

All other names, brands, products or services are trademarks or registered trademarks of their respective owners.

# Table of Contents

About This Document
Version History2
Copyright Statement2
Disclaimer2
Trademarks3
Table of Contents4
Chapter 1. Installing and Starting the SPhone Client on Android Devices5
1.1. Installing the SPhone Client5
1.2. Starting the SPhone Client5
1.3. Checking the Software Version7
1.4. Functionalities on the SPhone Client8
Live View
Icon Descriptions 10
Playback
PTZ/Preset 11
DI/DO
Info

# Chapter 1. Installing and Starting the SPhone Client on Android Devices

#### 1.1. Installing the SPhone Client

Download the SPhone Client from App Store on the Android phone desktop.

#### 1.2. Starting the SPhone Client

Note: Please check the web server settings in the VMS Setup first.

After the SPhone Client installation is done, a login window will pop up.

Cancel		
Server Name		
Address		
Port 80		
User Name admin		
Password		
Auto Login		
Remember Me		
Delete OK		

- Server Name: The VMS/SMR Server Name
- Address: The IP address for the VMS/SMR Server.
- Port: The login port for SPhone Client. Default port number is 80.

Note: The port number should be the same with the web server port.

- Username The username for the domain.Default username is admin.
- Password -The password for the domain. Default password is admin.

Click OKiconafter the port, username and passwordare entered.

#### 1.3. Checking the Software Version

Users can see the software version. Tap on the About Us on the upper right corner of the window after logging in.



#### 1.4. Functionalities on the SPhone Client

Live View

After logging in, you will see the Live View images. The default is 6 channels per page.



At most 6-channel live view can be displayed in the same page.

You can click on any channel you'd like to see or manage to have a single view on your device.



#### Icon Descriptions

lcon	Function	
EXIT	Use the Back icon to leave this page.	
	Use the snapshot icon to take a snapshot of the current view.	
$\bigcirc$	After tapping this icon, there'll be a drop-down list for you to select a camera to view or manage.	
Playback	Use the playback icon to view the recorded video from the current camera.	
PTZ	Use the PTZ icon to perform a Pan, tilt, zoom functionality.	
Preset	After tapping the PTZ icon, you'll also see a Preset icon. Use the Preset icon to monitor the set preset points. Presets should be made beforehand. Refer to the Chapter 8 for PTZ Preset settings.	
I/O DI/DO	Tap the icon to see the camera digital input/output status.	
info	Tap the icon to see a detailed information	

Playback

After tapping on the Playback icon 🔜 , you'll see the image below.

Use the icons on this page to set the date/time to search for the specified videos and use the Previous/Next, Play/Pause icons to view the recorded videos.



#### **PTZ/Preset**

After tapping the PTZ icon, you'll also see a Preset icon. Use the Preset icon to monitor the set preset points.

Presets should be made beforehand. Refer to the Chapter 8 for PTZ Preset settings.



#### DI/DO

Tap this icon to see the camera digital input/output status.

Back	CAM3471N	MP ⊘
Name		Status
Data Inp Data Inp	ut1 ut2	•
Data Output1		•

#### Info

The icon can be used to check the detailed information of each camera as follows.

Back	CAM3471MP	
Item	Specification	
NVR Server	SMR8300	
IP Address	192.168.2.120	
Resolution	2048x1536	
Quality	Medium	
Frame rate	8	

- NVR Server: The VMS/SMR Server name
- IP Address: The IP address for the VMS/SMR Server
- **Resolution**: The video resolution of the camera
- Quality: The video quality of the camera
- Frame Rate : The frame rate of the camera