

SPhone Client on iOS Devices

User Manual

Release 1.0



About This Document

This manual introduces the Sphone and describes how to install it. It also provides an overview of functionality.

Version History

Version	Description	Date
1.0	Initial release	Oct 2016

All Rights Reserved © Surveon Technology 201

Copyright Statement

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Surveon Technology Inc.

Disclaimer

Surveon Technology makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of

merchantability or fitness for any particular purpose. Furthermore, Surveon Technology reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revisions or changes. Product specifications are also subject to change without notice.

Trademarks

Surveon and Surveon logo are trademarks of Surveon Technology Inc. Other names prefixed with "NVR" and "SMR" are trademarks of Surveon Technology Inc.

- Microsoft Windows and Windows are registered trademarks of Microsoft Corporation.
- Linux is a trademark of Linux Torvalds.
- Solaris and Java are trademarks of Sun Microsystems, Inc.

All other names, brands, products or services are trademarks or registered trademarks of their respective owners.

Table of Contents

About This Document	2
Version History	2
Copyright Statement.....	2
Disclaimer	2
Trademarks.....	3
Table of Contents	4
Chapter 1. Installing and Starting the SPhone Client on iOS Devices	5
1.1. Installing the SPhone Client (Optional).....	5
1.2. Starting the SPhone Client	5
1.3. Checking the Software Version	6
1.4. Functionalities on the SPhone Client	6
Live View	6
Icon Descriptions	8
Playback	9
PTZ/Preset	9
DI/DO	10
Info	11

Chapter 1. Installing and Starting the SPhone Client on iOS Devices

1.1. Installing the SPhone Client (Optional)

Download the SPhone Client from App Store on the iPhone desktop.

1.2. Starting the SPhone Client

Note: Please check the web server settings in the VMS Setup first.

After the SPhone Client installation is done, a login window will pop up.

The screenshot shows the SPhone Client login interface. At the top, there is a header with the text "SPhone Client" and a blue "Connect" button. Below this is a section titled "Connection Settings" with the following fields:

- Address:** A text input field containing "192.168.2.149" with a checkmark icon on the right.
- Port:** A text input field containing "80".
- Username:** A text input field containing "admin".
- Password:** A text input field with masked characters represented by dots.

At the bottom left, there is a "Remember me" toggle switch, which is currently turned on (green). At the bottom right, the version number "3.0.0" is displayed.

- **Address:** The IP address for the VMS/SMR Server.
- **Port:** The login port for SPhone Client. **Default port number is 80.**

Note: The port number should be the same with the web server port.

- **Username** - The username for the domain. Default username is *admin*.
- **Password** -The password for the domain. Default password is *admin*.

Click **Connect** on the upper right corner after the port, username and password are entered.

1.3. Checking the Software Version

Users can see the software version at the lower right corner of the window after logging in.


1.4. Functionalities on the SPhone Client

Live View


After logging in, you will see the Live View images. The default is 6 channels per page.



You can click on any channel you'd like to see or manage to have a single view on your device.

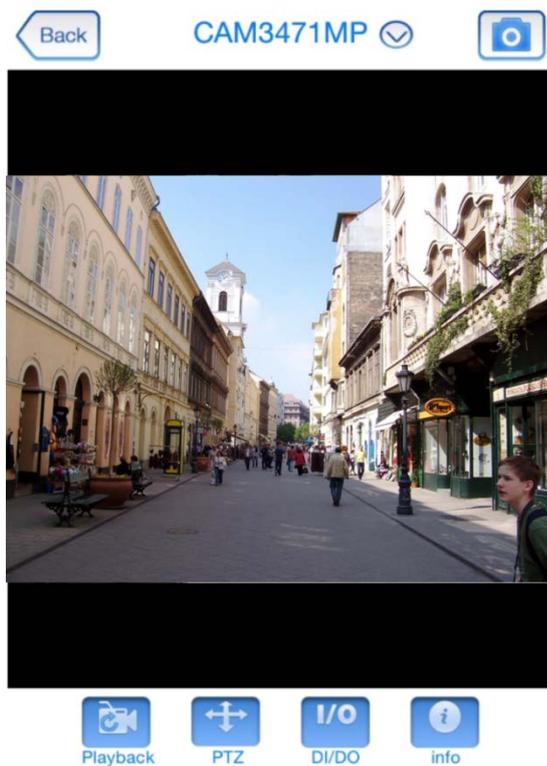


Icon Descriptions

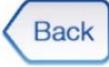Icon	Function
	Use the Back icon to go back to the previous page.
	Use the snapshot icon to take a snapshot of the current view.
	After tapping this icon, there'll be a drop-down list for you to select a camera to view or manage.
	Use the playback icon to view the recorded video from the current camera.
	Use the PTZ icon to perform a Pan, tilt, zoom functionality.
	<p>After tapping the PTZ icon, you'll also see a Preset icon. Use the Preset icon to monitor the set preset points.</p> <p>Presets should be made beforehand. Refer to the Chapter 8 for PTZ Preset settings.</p>
	Tap the icon to see the camera digital input/output status.
	Tap the icon to see a detailed information

Playback

After tapping on the Playback icon , you'll see the image below.


Use the icons on this page to set the date/time to search for the specified videos and use the Previous/Next, Play/Pause icons to view the recorded videos.

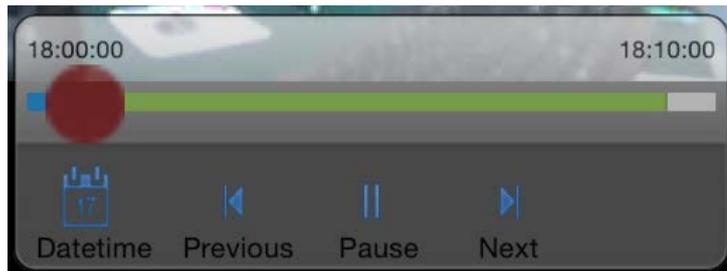

PTZ/Preset

After tapping the PTZ icon, you'll also see a Preset icon. Use the Preset icon to monitor the set preset points.

Presets should be made beforehand. Refer to the Chapter 8 for PTZ Preset settings.

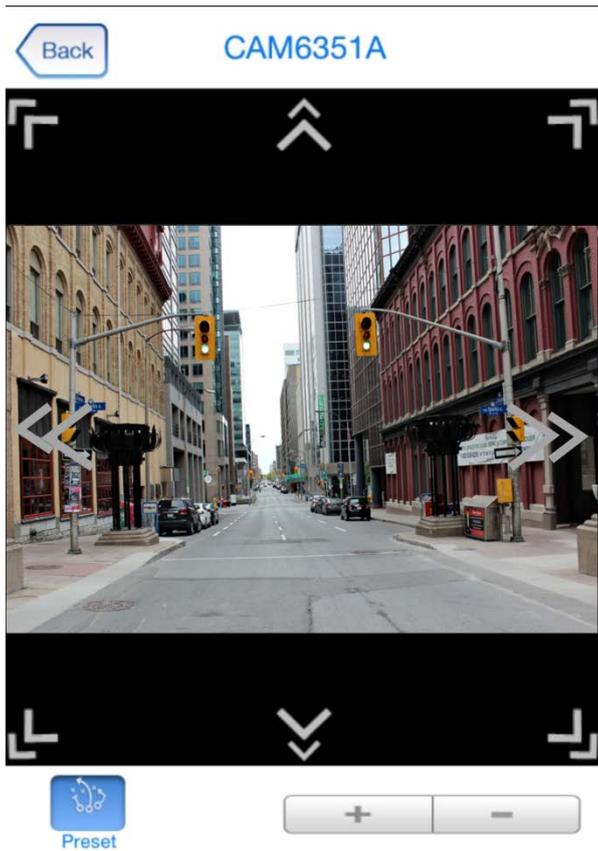

DI/DO

Tap this icon to see the camera digital input/output status.

Name	Status
Data Input 1	●
Data Input 2	●
Data Output 1	●

Info

The  icon can be used to check the detailed information of each camera as follows.

 **CAM3471MP**

Item	Specification
NVR Server	SMR8300
IP Address	192.168.2.120
Resolution	2048x1536
Quality	Medium
Frame rate	8

- **NVR Server:** The VMS/SMR Server name
- **IP Address:** The IP address for the VMS/SMR Server
- **Resolution:** The video resolution of the camera
- **Quality:** The video quality of the camera
- **Frame Rate :** The frame rate of the camera